

# 1. Proteus Installation Tutorial

## Step 1 : Install Proteus


If you haven't install. Then Install, remember from DSD.

## Step 2 : Download the Arduino Library for Proteus


Download from here : <https://drive.google.com/file/d/1LMYOUUn39nAZBdGL0SR3n30pf-fRXeP-B/view>

## Step 3 : Install the Library

Go to the System Settings in System Tab :

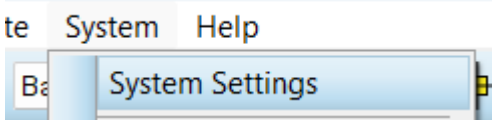

And then choose where you extract the downloaded folder :

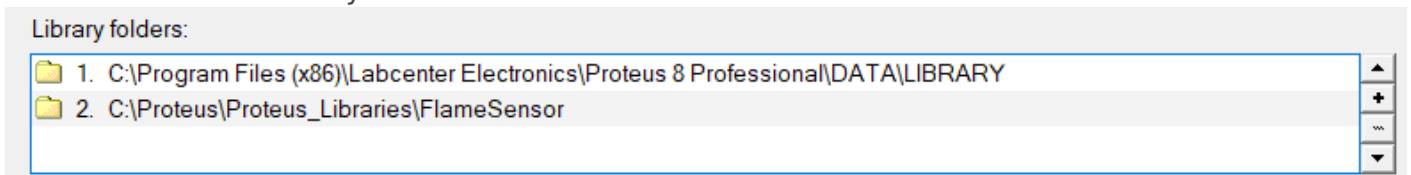

## Step 4 : Install Arduino IDE

Go and Install Arduino IDE from here : <https://www.arduino.cc/en/software>

---

Revision #3

Created 2026-02-04 07:08:51 UTC by AX

Updated 2026-02-04 08:21:30 UTC by AX